

- i. Insert a micro SD card to the designated slot (Maximum capacity 32GB)
- ii. Go to the "SD setting" in the settings menu.
- iii. Press "SD Format" and confirm in the following Prompt.




- c. <u>Time Settings</u>: In order to have the correct time stamp on the camera live view and
- recorded files, you must set the camera's clock:
- i. In the camera settings press on "Time Setting"
- ii. In the next menu switch "Sync With Local Time" to On. It will update the time of the camera and switch back to off automatically.











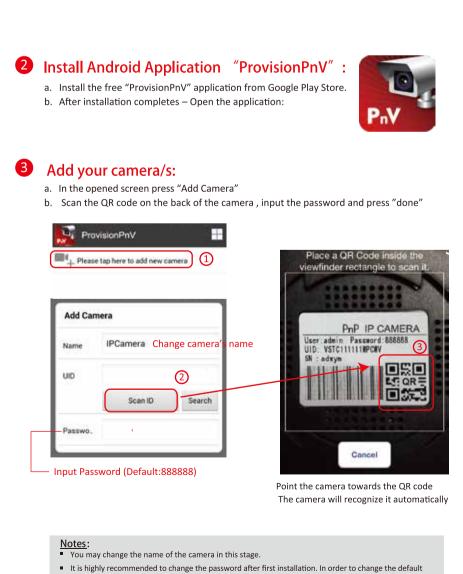

password go to the "Password Setting" under the camera settings menu.

you can also serch for camera by click "serch" This will automatically find all the cameras available on

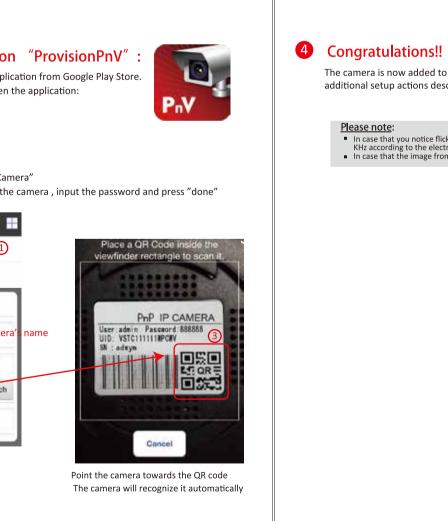

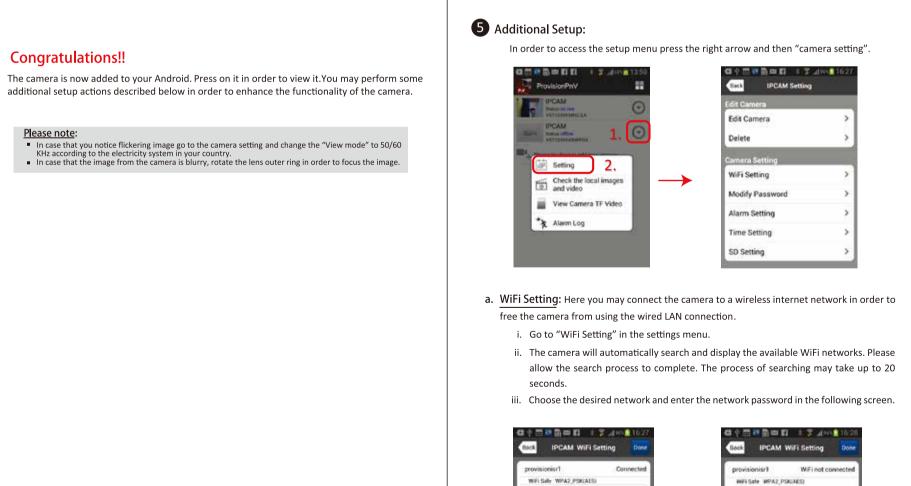

WiFi Safe WPA_PSK(TKIP) WiFi Signal BGN

